

# **POWER COMMANDER III**

## **2001-2004 Honda CBR600 F4i** Installation Instructions

### **Parts List**

- 1 Power Commander
- 1 CD-ROM
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 Velcro® Strip
- 1 Alcohol Swab




**The ignition MUST be turned OFF before installation!**

You can also download the Power Commander software  
and latest maps from our web site at:

**[www.powercommander.com](http://www.powercommander.com)**

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**


Fig. A

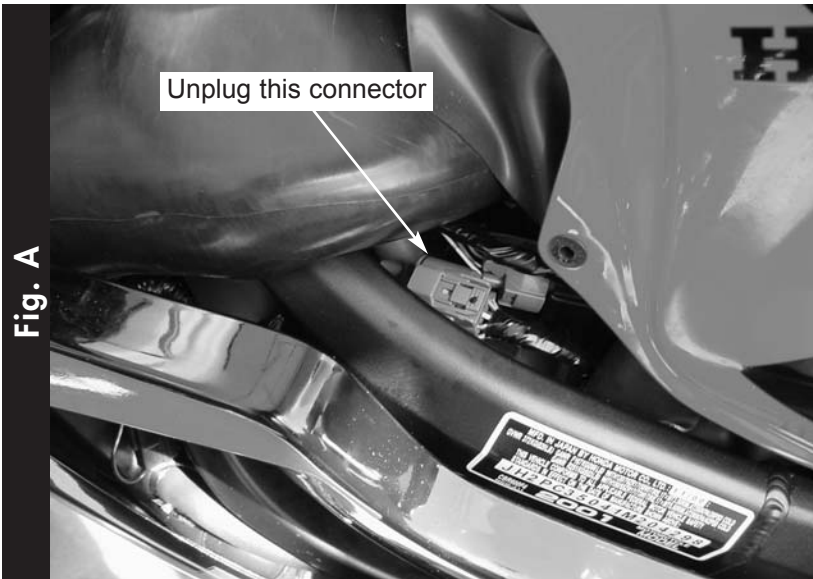

- 1 Remove the main seat and the passenger seat.
- 2 Remove the black left hand inner fairing panel by removing the two bolts (this panel surrounds the gauges down to the fuel tank).
- 3 Unplug the connector (Fig. A) which may be located under the rubber flap.


**NOTE:** There is another connector located under the fuel tank near the rear shock. DO NOT plug the PCIII connectors into this area.

Fig. B

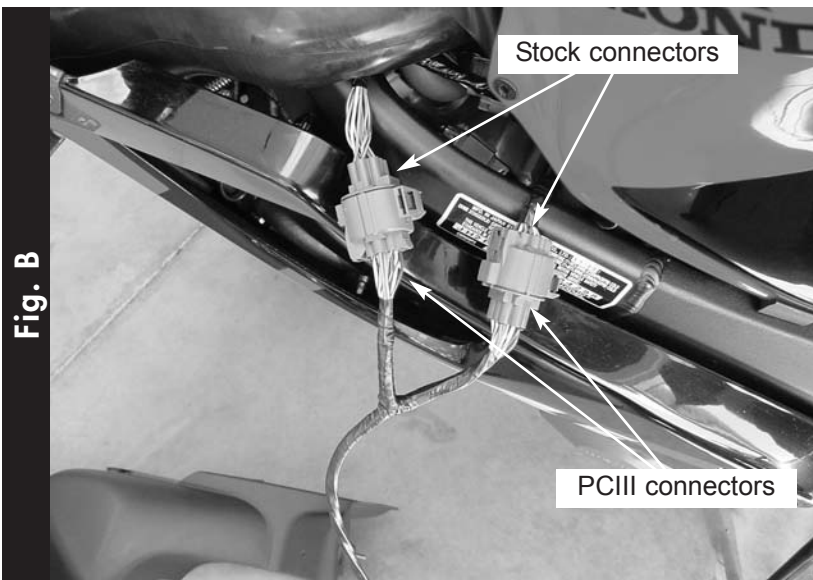

- 4 Plug the connectors from the PCIII in-line of the stock wiring harness (Fig. B).


Fig. C

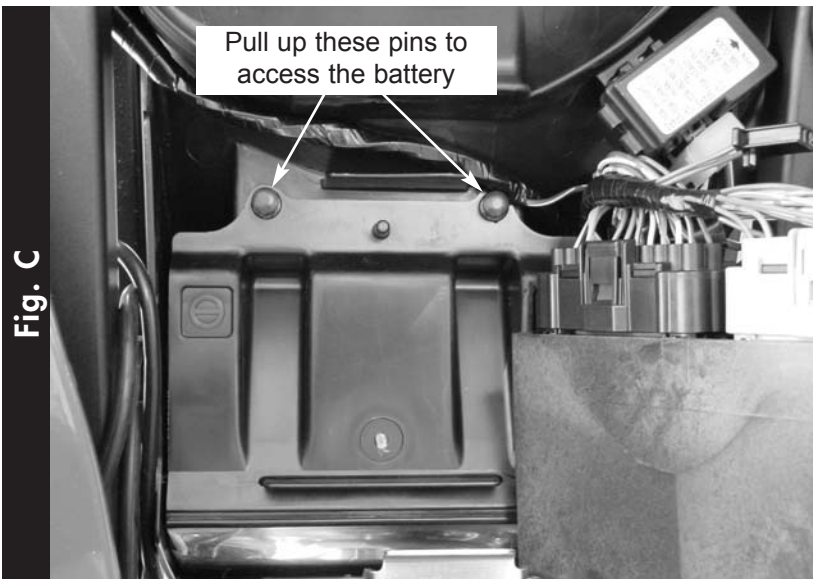

- 5 Route the PCIII wiring along the inside of the frame towards the battery.

**NOTE:** The fuel tank may have to be lifted up to do this.

- 6 Locate the negative side of the battery by lifting up the ECU and removing the pins that holds the battery cover down (Fig. C).

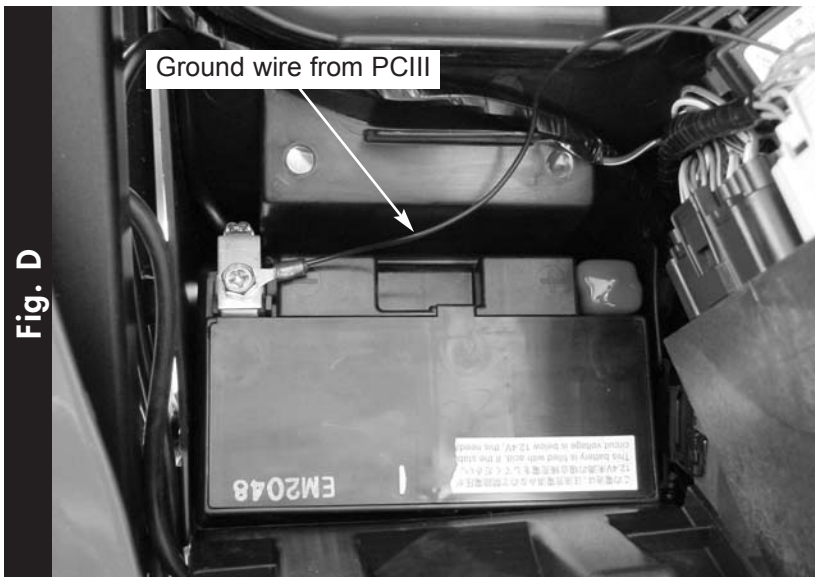

- 7 Connect the ground wire from the PCIII to the negative side of the battery (Fig. D).



- 8 Reinstall the battery cover and ECU.
- 9 Install the PCIII in the rear section of the trunk using the supplied velcro (Fig. E). Make sure to clean both surfaces first with alcohol.
- 10 Reinstall the bodywork.
- 11 Reinstall the main seat and the passenger seat.